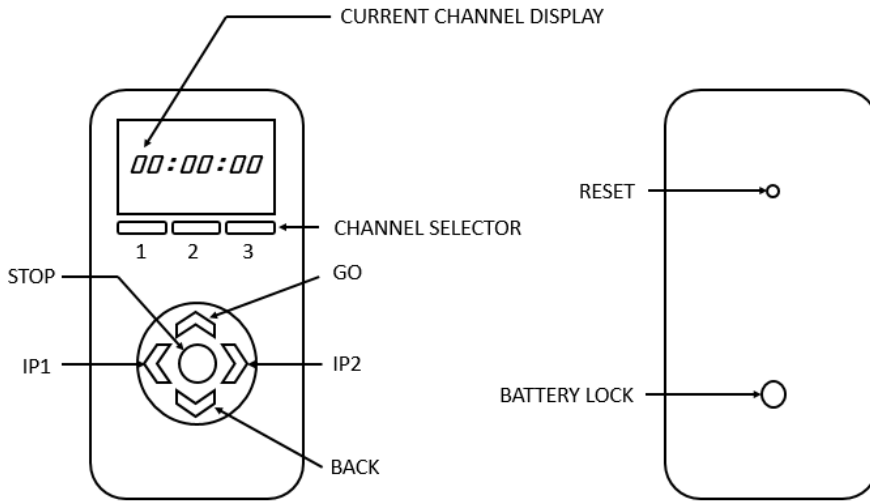


16 Channel Master Controller - TRSX-YRL2016

Note: Check our website for the latest version of this manual.



Before using the remote control functions, user must pair the remote to the motor.

Pairing with motor


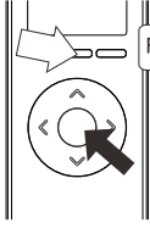

<p>1. Press the motor [PROGRAMMING] button for 3 seconds till the light on.</p>	<p>2. If the remote has multiple channels select the desired one by pressing the [CHANNEL SELECTOR] button.</p>	<p>3. Press the [RESET] button on the back of transmitter till the indicator light of the motor flash.</p>	<p>4. Press the motor [RESET] button again to confirm the operation.</p>

Motor will make relevant actions when you press **[GO]**, **[BACK]**, **[STOP]** button on transmitter or wall mounted controller.

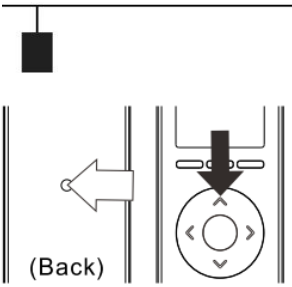
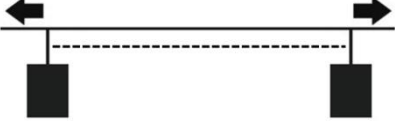
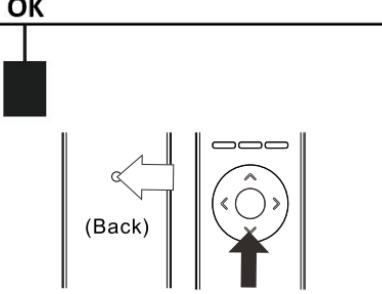
Deleting all channels

<p>1. Press and Hold for 3s the motor [PROGRAMMING] button to enter programming mode.</p>	<p>2. Press [RESET] button on the motor for 7 seconds to delete all channels.</p>

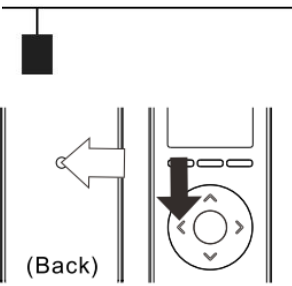
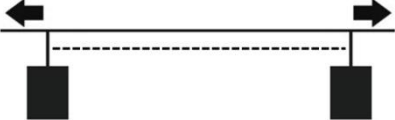
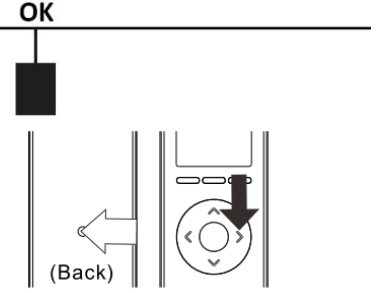
Changing Motor direction

		
<p>1. Press and Hold for 3s the motor [RESET] button.</p>	<p>2. Press at the same time [STOP] and the [CHANNEL SELECTOR] buttons.</p>	<p>3. Press [RESET] button on the motor.</p>

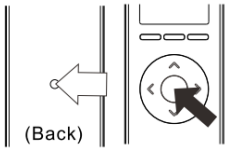
Setting Limit Range 1

		
<p>1. Press the [RESET] on the back of transmitter + [GO] button. The motor shaft will rotate back and forth shortly to indicate that it is in adjusting mode for Limit 1.</p>	<p>2. Move the target holder into the suitable place for Limit 1.</p>	<p>3. Press [RESET] on the back of transmitter + [BACK] button, the motor will quiver for a moment and the process will be finished.</p>

Setting Limit Range 2

		
<p>1. Press the [RESET] on the back of transmitter + [IP1] button. The motor shaft will rotate back and forth shortly to indicate that it is in adjusting mode for Limit 2.</p>	<p>2. Move the target holder into the suitable place for Limit 2.</p>	<p>3. Press [RESET] on the back of transmitter + [IP2] button, the motor will quiver for a moment and the process will be finished.</p>

Deleting Limits

 <p>Press the remote [RESET] + [STOP] button.</p>
