



# ASSEMBLY DIAGRAM FOR BTL1818 AND BTL2424 TRAPS ONLY

1		(15)	7		(15)
2		(1)	8		(2)
3		(1)	9		(1)
4		(1)	10		(17)
5		(1)	11		(1)
6		(1)			

