




## Master Controller 20 channel

### TRSX-MC20

#### Remote Control Layout

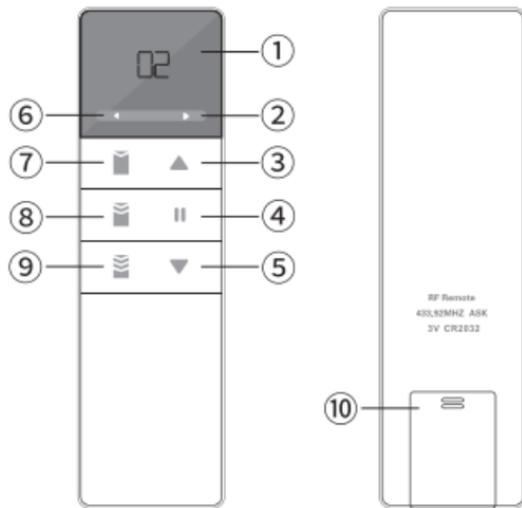

1. LED light
2. Channel Select UP
3. GO
4. STOP
5. BACK
6. Channel Select DOWN
7. 75% length
8. 50% length
9. 25% length
10. Battery Cover/Controller Reset Switch


The TRSX-MC20 Master Controller allows the control of up to 20 individual lanes.

### Features


1. 8 front buttons: 2 for Channel election, and 6 for Go, Back, Stop, and 3 intermediate stopping points user-programmable
2. Allows the setup of range limits so the carrier will self-stop at the pre-determined limits, without hitting the end of the rail
3. 3 intermediate stopping points, user-programmable

### Functions


1. **Pairing/Unpairing the Controller**
  - a. **Press and hold for 3s the Reset button on the motor (RED light comes ON)**
  - b. Select the desired channel on the controller (1 to 20)

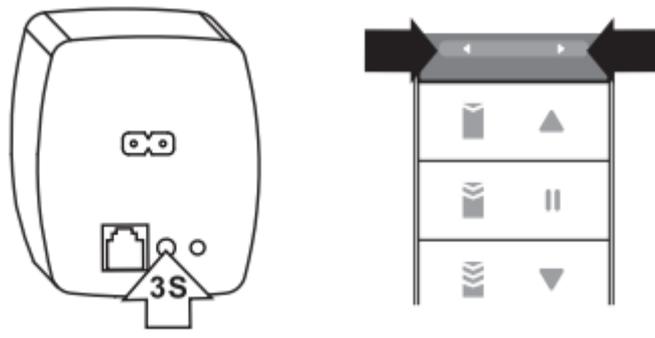

- c. Press the Reset button on the controller (remove the battery cover, press the one on the left side) (motor RED light blinks)

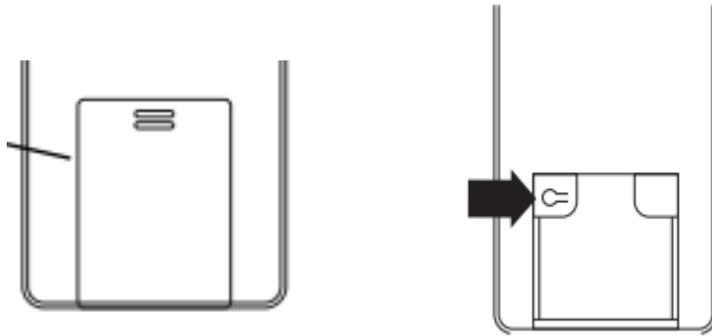


- d. Press the motor Reset button to confirm, 1 more time. RED light stops blinking.

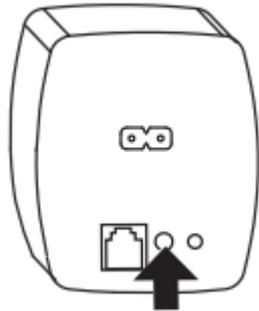


- e. To unpair, Press and Hold the motor Reset button for 3s until RED light comes ON, then release the button and press again for 7s.

**Attention: This process will clear all memory and also clears all limits.**

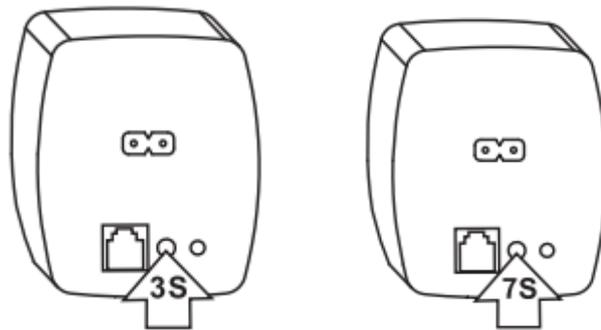

## 2. Setting the Limits

- a. Clear the motor of potential pre-existing limits by Press & Hold the Reset and Stop buttons for 5s. Motor will vibrate at the end of 5s period.

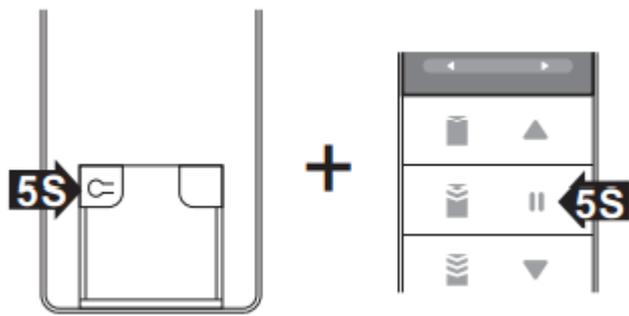


**b. Setting Far-End (GO) limit**

- i. Send the carrier to the desired position
- ii. Press & Hold the controller Reset and GO buttons for 5s. Motor will vibrate at the end of 5s period.
- iii. Red Light on the motor will come ON
- iv. Confirm by pressing the motor Reset button



**c. Setting Back (Home) limit**


- i. Same procedure as above but press instead the BACK button on the controller.

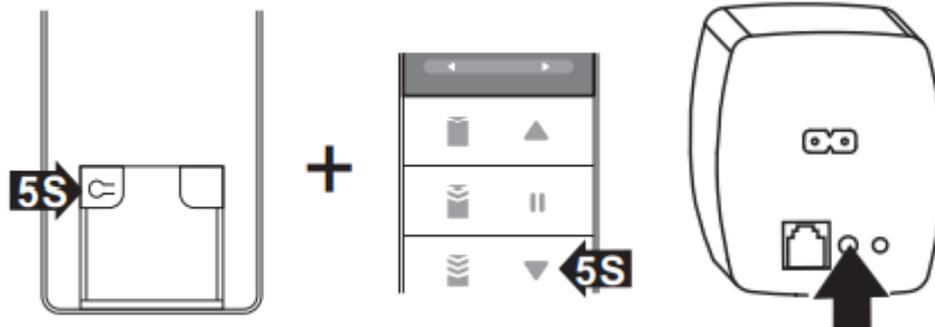


**3. Setting intermediate points**

**a. Example: Stopping at 25% of the length.**


- i. Move the carrier in desired position.
- ii. Press & Hold the controller Reset button then the corresponding 25% button.

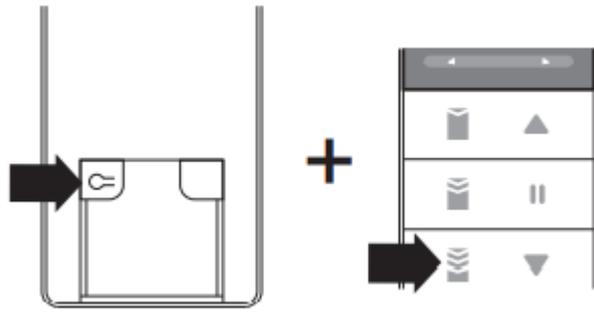

**b. Example: Stopping at 50% of the length**

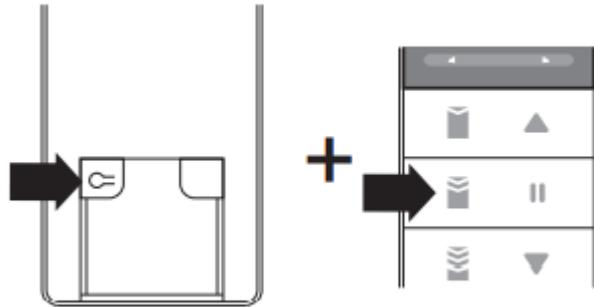

**c. Example: Stopping at 75% of the length**

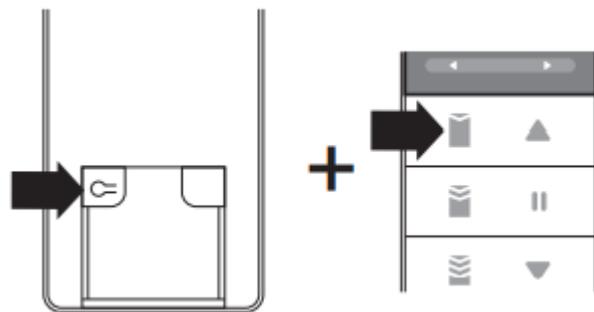

**4. Modify the intermediate points**

- a. Repeat the above procedure

**5. Change motor direction**

- a. Press & Hold the Motor reset button for 3s until RED light come ON
- b. Press shortly the Channel Selection and Stop button together
- c. Motor RED light starts blinking
- d. Press the Motor Reset button 1 more time to confirm.

