



Acoustical Panel Adhesive Ceiling Installation P.E.P.P


CAUTION:

IS IT HIGHLY RECOMMENDED THAT THESE PRODUCTS SHOULD BE INSTALLED BY EXPERIENCED INSTALLERS.

INSTALLATION:

Good tools are needed to install panels if cutting is necessary. Care needs to be taken when cutting and fitting around penetrations. To achieve this, the following tools are recommended:


- Panel adhesive (construction adhesive for painted or concrete substrate)
- Spray adhesive
- Table saw, miter saw, jig saw, hole saw, or utility knife
- Drywall square

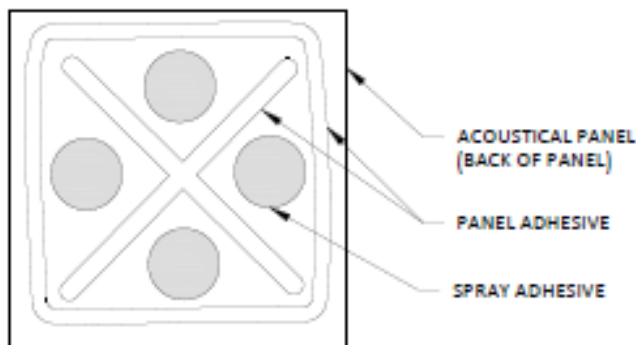

CEILING INSTALLATION:


Measure and mark the distance to two adjacent sides of the panel where it is to be placed on the ceiling, ensuring they intersect to form a corner. Cut the nozzle of the construction adhesive cartridge so that a 1/4" bead of adhesive can be applied. Apply adhesive evenly in a X-pattern with at least 3/4" of space along the edges as shown. Apply spray adhesive in each quadrant of the X-pattern. Do not overspray onto the construction adhesive lines. The spray adhesive must set generally 3-4 minutes before mounting. Align the panel edges to the marked lines, matching the corner of the panel to the corner drawn on the surface. Apply medium pressure on each side to set the edge adhesive, then apply even pressure to the remaining area.

NOTE: The adhesives are used together as a system – the spray adhesive will hold the panel to the ceiling and set instantly while the permanent construction adhesive is setting.

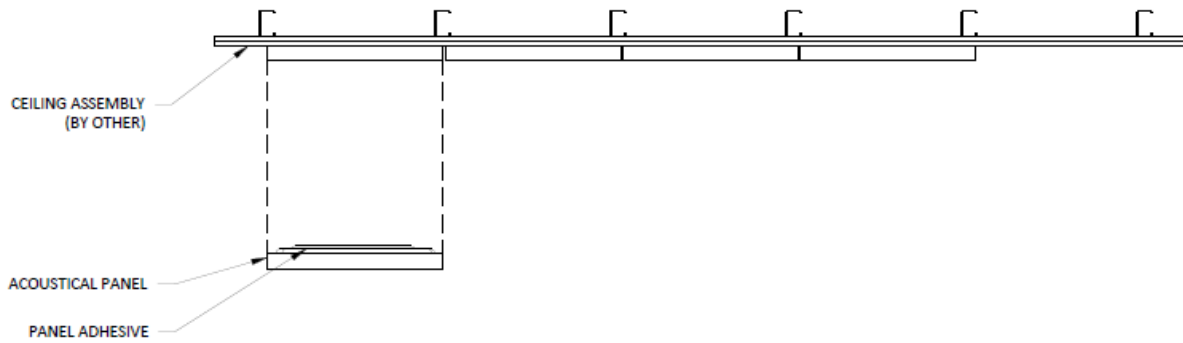

SPECIAL HANDLING INSTRUCTIONS

When handling product, care must be taken to not damage face of the panel. Handle all edges with care. To avoid damage, do not twist or bow the panels during installation.

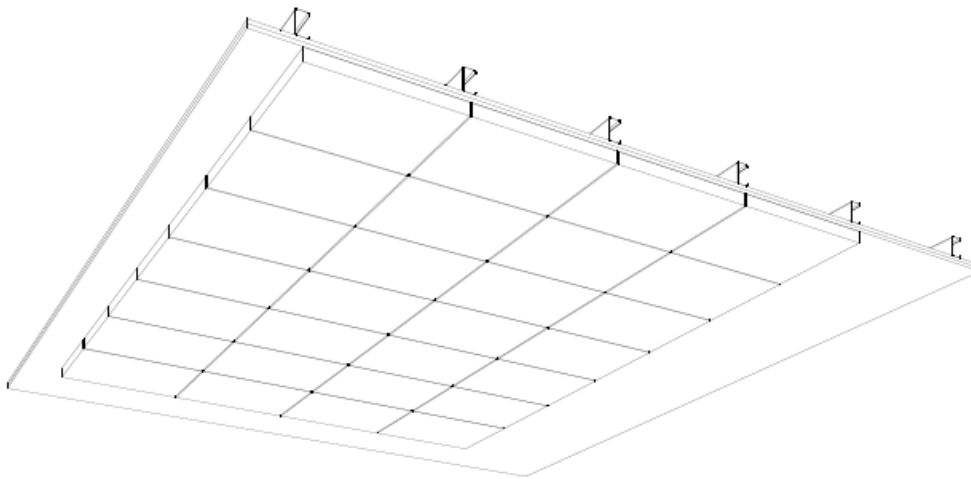

RECOMMENDED ADHESIVES (OR EQUIVALENT):

1. Titebond Green Choice Construction Adhesive
2. Noise S.T.O.P Pro Series Web Spray Adhesive